Supplies4Heat

CHAUCER Vertical Fitting Instructions


Steel Radiator in White RAL 9016 23mm Round Tube, 30mm Round Collectors

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.



Drawings

Fig 1 Single Chaucer

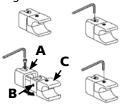



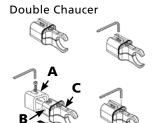


Fig 2


Diverter

Fig 3 Single Chaucer

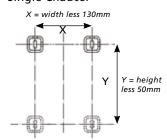

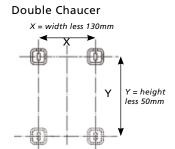

Single

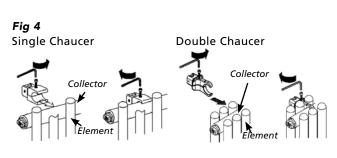

Pipe Centres

Pipe centres left to right = width plus valves width plus valves

Pipe centres from wall = 55mm 79mm - 89mm

Depth from wall = 90mm 114mm - 124mm

1. Unpack & Inspect

This product should have reached you in perfect condition. Please carefully unpack and inspect this radiator and all fittings. Your point of purchase must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on reverse.

Double

2. Contents

You should have:

- 1 Radiator
- 4 Wall Brackets
- 4 Wall Plugs
- 4 Screws
- 4 Wall Sleeves
- 1 Airvent
- 1 Blanking Plug

You will need:

- Tape measure
- Electric drill and bits
- Spirit level

PLEASE NOTE:

It is essential that all brackets are level and square prior to hanging the radiator to ensure a vertical alignment for connecting the pipework.

Using a suitable drill bit, screws and plugs, fix the brackets

5. Identify Diverter

4. Fix Brackets

and level with a spirit level.

Factory fitted steel diverters are used in all vertical models and can be identified by a sticker found on the underside of one collector. The radiator must be hung with the diverter at the bottom. If this sticker is missing simply look into both collectors, one will have a clear water way and one will have a deliberate blockage, this deliberate blockage is the diverter. Please note the diverter can not be removed

6. Hang & Commission

With the brackets sleeves firmly fixed and level, the radiator can be hung in position by inserting the brackets into the sleeves and securing with the grub scews provided.

When commissioning your radiator on an indirect/closed system we recommend using a suitable mixed metal inhibitor to protect against scale & corrosion.

Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

3. Mark Bracket Positions

- Mark bracket positions as per Fig. 3, measure the width (X) of the radiator less 130mm and the height (Y) of the radiator less 50mm to find your four fixing positions for the Wall sleeves.
- 2. The Wall Sleeve ("A" in **Fig.1**) screws into the wall in the positions as described above.
- 3. Ensure diverter is in the correct position
- **4.** Attach clamps B & C to collector between the 2nd and 3rd element from either side, do not overtighten (**Fig.1**) this, to allow slight adjustment for inserting into wall sleeves.
- 5. Raise radiator & slot into Wall sleeves "A" & tighten (Fig. 4)

Technical Specifications

Materials Steel.

Connections ½" flow and return.

Test pressure6 BarMaximum operating pressure4 BarMaximum working temperature95°C

Packaging Wrapped in polyethlyene & boxed.

Terms & Conditions

All products must be inspected once removed from the packaging and your point of purchase notified within 28 days of delivery of any scratches, blemishes or other damage. Your point of purchase will then agree appropriate action.

Imperfect radiators should therefore not be fitted and we will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If we are not notified within 28 days of the date on the signed delivery note then it will be deemed that we have fully complied with our obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims. We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation, we cannot accept responsibility for items damaged after delivery.

For full details of our Terms and Conditions please visit www.supplies4heat.co.uk or call us on 01342 306880.

Guarantees & Liabilities

This product is guaranteed for 10 years. The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to us.